# Dual Output 4 Phase +1/0 Phase Controller with single SVID Interface for Desktop and Notebook CPU Applications

The NCP6151/NCP6151A dual output four plus one phase buck solution is optimized for Intel VR12 compatible CPUs. The controller combines true differential voltage sensing, differential inductor DCR current sensing, input voltage feed-forward, and adaptive voltage positioning to provide accurately regulated power for both Desktop and Notebook applications. The control system is based on Dual-Edge pulse-width modulation (PWM) combined with DCR current sensing providing the fastest initial response to dynamic load events and reduced system cost. It also sheds to single phase during light load operation and can auto frequency scale in light load while maintaining excellent transient performance.

Dual high performance operational error amplifiers are provided to simplify compensation of the system. Patented Dynamic Reference Injection further simplifies loop compensation by eliminating the need to compromise between closed-loop transient response and Dynamic VID performance. Patented Total Current Summing provides highly accurate current monitoring for droop and digital current monitoring.


NCP6151A support coupled inductor operation. It operates with 2 phases versus NCP6151 operating with single phase during PS1 mode.

#### **Features**

- Meets Intel VR12/IMVP7 Specifications
- Current Mode Dual Edge Modulation for Fastest Initial Response to Transient Loading
- Dual High Performance Operational Error Amplifier
- One Digital Soft Start Ramp for Both Rails
- Dynamic Reference Injection<sup>®</sup> (Patent #US07057381)
- Accurate Total Summing Current Amplifier(Patent #US006683441)
- DAC with Droop Feed-forward Injection(Patent Pending)
- Dual High Impedance Differential Voltage and Total Current Sense Amplifiers
- Phase-to-Phase Dynamic Current Balancing
- "Lossless" DCR Current Sensing for Current Balancing
- Summed Thermally Compensated Inductor Current Sensing for Droop
- True Differential Current Balancing Sense Amplifiers for Each Phase
- Adaptive Voltage Positioning (AVP)



#### ON SemiconductorM

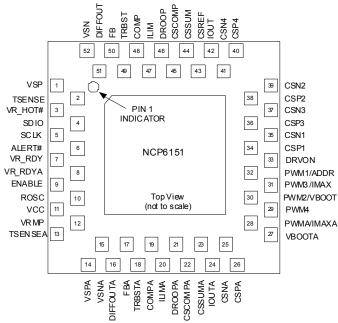

QFN52 Dual Row Pin Package


Device	Package	Shipping
NCP6151D52MNR2G	QFN52	2500/Tape &
1401 0131032101141420	Dual Row	Reel
NCP6151AD52MNR2G	QFN52	2500/Tape &
NCP6151AD52WINR2G	Dual Row	Reel
NCP61510091MNR2G	QFN52	2500/Tape &
NCF01310091MINR2G	Dual Row	Reel

- \* Pb-free and Halide-free packages are available
- Switching Frequency Range of 200KHz 1.0MHz
- Startup into Pre-Charged Loads While Avoiding False OVP
- Power Saving Phase Shedding
- Vin Feed Forward Ramp Slope
- Pin Programming for Internal SVID parameters
- Over Voltage Protection (OVP) & Under Voltage Protection (UVP)
- Over Current Protection (OCP)
- Dual Power Good Output with Internal Delays
- NCP6151A support coupled inductor operation


#### **Applications**

• Desktop & Notebook Processors

# **Block Diagram**

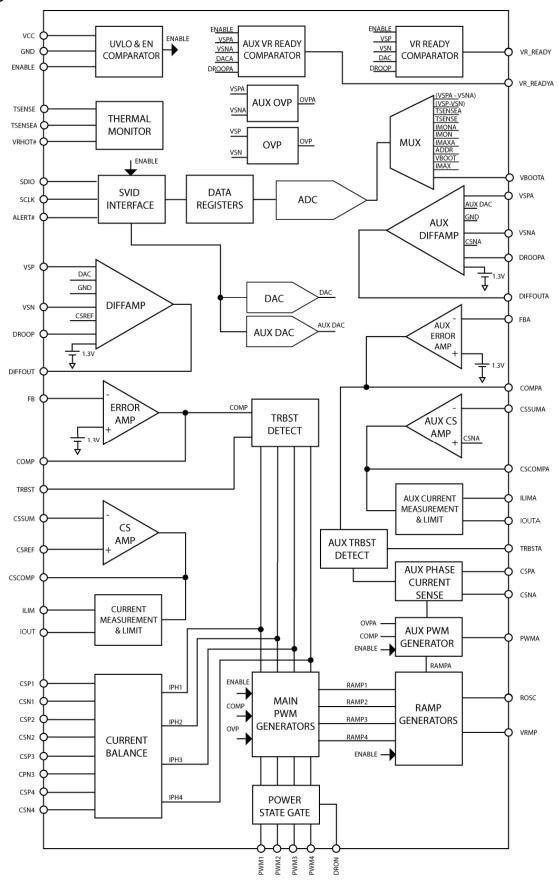

# NCP6151 QFN52 Dual Row Pin Diagram

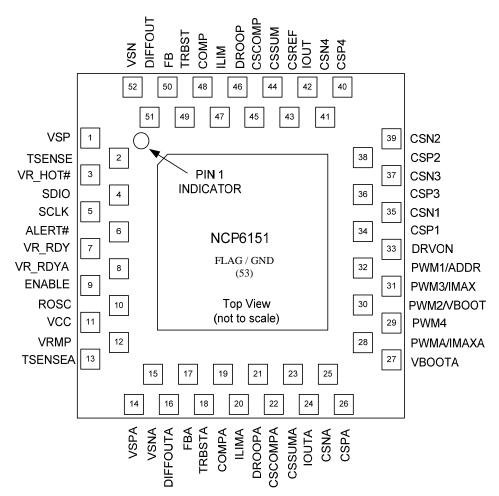


# NCP6151/NCP6151A QFN52 Dual Row Pin List and Descriptions

Pin No.	Symbol	Description
1	VSP	Non-inverting input to the core differential remote sense amplifier.
2	TSENSE	Temp Sense input for the multiphase converter
3	VR_HOT#	Thermal logic output for over temperature.
4	SDIO	Serial VID data interface.
5	SCLK	Serial VID clock.
6	ALERT#	Serial VID ALERT#.
7	VR_RDY	Open drain output. High indicates that the core output is regulating.
8	VR_RDYA	Open drain output. High indicates that the aux output is regulating.
9	ENABLE	Logic input. Logic high enables both outputs and logic low disables both outputs.
10	ROSC	A resistance from this pin to ground programs the oscillator frequency. This pin supplies a trimmed output voltage of 2V.
11	VCC	Power for the internal control circuits. A decoupling capacitor is connected from this pin to ground.
12	VRMP	Feed-forward input of Vin for the ramp slope compensation. The current fed into this pin is used to control of the ramp of PWM slope
13	TSENSEA	Temp sense for the single phase converter

15   VSNA	14	VSPA	Non-inverting input to the aux differential remote sense amplifier
FBA	15	VSNA	Inverting input to the aux differential remote sense amplifier
TRBSTA Compensation pin for the load transient boost.  OUTDUT of the aux error amplifier and the inverting input of the PWM comparator for aux output.  ILIMA Over current shutdown threshold setting for aux output. A resistor to CSCOMPA sets the threshold.  DROOPA Used to program droop function for aux output. It's connected to the resistor divider placed between CSCOMPA and CSREFA.  CSCOMPA Output of total current sense amplifier for aux output.  IOUTA Total output current monitor for aux output.  IOUTA Total output current monitor for aux output.  CSNA Inverting input to aux current sense amplifier for aux output.  INVERTING TOTAL OUTPUT A Total output current monitor for aux output.  Non-Inverting input to aux current sense amplifier.  VBOOTA VBOOTA VBOOTA VBOOTA VBOOTA VOItage input pin. Set to adjust the aux boot-up voltage.  PWMA/IMAXA AUX PWM output to gate driver. During start up it is used to program ICC_MAXA with a resistor to ground.  PWM2/VBOOT Phase 4 PWM output. Pull to VCC to program 3 phase operation.  PMM3/IMAX Phase 3 PWM output. Full to VCC to program 3 phase operation.  Phase 2 PWM output. ICC_MAX Input Pin. During start up it is used to program VBOOT with a resistor to ground.  Phase 3 PWM output. A resistor to ground on this pin programs the SVID address of the devise.  DRON Bidirectional gate drive enable for core output.  CSP1 Non-inverting input to current balance sense amplifier for phase 1  Inverting input to current balance sense amplifier for phase 3  CSN3 Inverting input to current balance sense amplifier for phase 3  CSP2 Non-inverting input to current balance sense amplifier for phase 2  Inverting input to current balance sense amplifier for phase 2  Inverting input to current balance sense amplifier for phase 2  CSP4 Non-inverting input to current balance sense amplifier for phase 2  ILIM INVERTING INVE	16	DIFFOUTA	Output of the aux differential remote sense amplifier
COMPA	17	FBA	Error amplifier voltage feedback for aux output
OUNTA	18	TRBSTA	
DROOPA	19	СОМРА	, , , , , , , , , , , , , , , , , , , ,
DROUPA   placed between CSCOMPA and CSREFA	20	ILIMA	
CSSUMA   Inverting input of total current sense amplifier for aux output	21	DROOPA	
24	22	CSCOMPA	Output of total current sense amplifier for aux output
CSNA			
CSPA			
VBOOTA			
PWMA/IMAXA			
PWM4 Phase 4 PWM output. Pull to VCC to program 3 phase operation.  PWM2/VBOOT Phase 2 PWM output. VBoot program pin. During start up it is used to program VBOOT with a resistor to ground.  PWM3/IMAX Phase 3 PWM output. ICC_MAX Input Pin. During start up it is used to program ICC_MAX with a resistor to ground.  PWM1/ADDR Phase 1 PWM output. A resistor to ground on this pin programs the SVID address of the devise.  REPUBLICATION BURNARY RESISTANCE OF THE PRINCE OF THE PWM OUTPUT. A resistor to ground on this pin programs the SVID address of the devise.  REPUBLICATION BURNARY RESISTANCE OF THE PRINCE OF THE PWM OUTPUT. A resistor to ground on this pin programs the SVID address of the devise.  REPUBLICATION BURNARY RESISTANCE OF THE PRINCE OF THE PRIN	27	VBOOTA	
PWM2/VBOOT Phase 2 PWM output. VBoot program pin. During start up it is used to program VBOOT with a resistor to ground.  PWM3/IMAX Phase 3 PWM output. ICC_MAX Input Pin. During start up it is used to program ICC_MAX with a resistor to ground.  Phase 1 PWM output. A resistor to ground on this pin programs the SVID address of the devise.  PPMM1/ADDR Phase 1 PWM output. A resistor to ground on this pin programs the SVID address of the devise.  RON Bidirectional gate drive enable for core output.  Non-inverting input to current balance sense amplifier for phase 1  Non-inverting input to current balance sense amplifier for phase 1  Non-inverting input to current balance sense amplifier for phase 3  Non-inverting input to current balance sense amplifier for phase 3  ROSP2 Non-inverting input to current balance sense amplifier for phase 2  Inverting input to current balance sense amplifier for phase 2  Non-inverting input to current balance sense amplifier for phase 4  ICSN4 Inverting input to current balance sense amplifier for phase 4  IOUT Total output current monitor for core output.  SCREF Total output current sense amplifier reference voltage input.  Inverting input of total current sense amplifier for core output.  CSCOMP Output of total current sense amplifier for core output.  Used to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.  Over current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.  COMP Output of the error amplifier and the inverting inputs of the PWM comparators for the core output.  TRBST Compensation pin for the load transient boost.  FB Error amplifier voltage feedback for core output.  Output of the core differential remote sense amplifier.			resistor to ground
PWM3/IMAX Phase 3 PWM output. ICC_MAX Input Pin. During start up it is used to program ICC_MAX with a resistor to ground.  Phase 1 PWM output. A resistor to ground on this pin programs the SVID address of the devise.  PWM1/ADDR Phase 1 PWM output. A resistor to ground on this pin programs the SVID address of the devise.  Bidirectional gate drive enable for core output.  Non-inverting input to current balance sense amplifier for phase 1  SCSP1 Non-inverting input to current balance sense amplifier for phase 1  Non-inverting input to current balance sense amplifier for phase 3  Non-inverting input to current balance sense amplifier for phase 3  CSP2 Non-inverting input to current balance sense amplifier for phase 2  Non-inverting input to current balance sense amplifier for phase 2  Inverting input to current balance sense amplifier for phase 2  Non-inverting input to current balance sense amplifier for phase 4  ICSN4 Inverting input to current balance sense amplifier for phase 4  IOUT Total output current monitor for core output.  SCREF Total output current sense amplifier reference voltage input.  Inverting input of total current sense amplifier for core output.  CSCOMP Output of total current sense amplifier for core output.  Used to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.  Over current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.  COMP Output of the error amplifier and the inverting inputs of the PWM comparators for the core output.  TRBST Compensation pin for the load transient boost.  FB Error amplifier voltage feedback for core output.  Usunetting input to the core differential remote sense amplifier.	29	PWM4	Phase 4 PWM output. Pull to VCC to program 3 phase operation.
PWMI/ADDR   ICC_MAX with a resistor to ground.   Phase 1 PWM output. A resistor to ground on this pin programs the SVID address of the devise.   Sidirectional gate drive enable for core output.	30	PWM2/VBOOT	VBOOT with a resistor to ground.
the devise.  Bidirectional gate drive enable for core output.  Bidirectional gate drive enable for core output.  Non-inverting input to current balance sense amplifier for phase 1  Non-inverting input to current balance sense amplifier for phase 1  Non-inverting input to current balance sense amplifier for phase 3  Non-inverting input to current balance sense amplifier for phase 3  Non-inverting input to current balance sense amplifier for phase 3  Non-inverting input to current balance sense amplifier for phase 2  Non-inverting input to current balance sense amplifier for phase 2  Non-inverting input to current balance sense amplifier for phase 4  CSP4  Non-inverting input to current balance sense amplifier for phase 4  Inverting input to current balance sense amplifier for phase 4  CSN4  Inverting input to current balance sense amplifier for phase 4  IOUT  Total output current monitor for core output.  CSREF  Total output current sense amplifier reference voltage input.  Inverting input of total current sense amplifier for core output.  CSCOMP  Output of total current sense amplifier for core output.  Used to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.  Nore current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.  Over current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.  TRBST  Compensation pin for the load transient boost.  FB  Error amplifier voltage feedback for core output  DIFFOUT  Output of the core differential remote sense amplifier.	31	PWM3/IMAX	ICC_MAX with a resistor to ground.
CSP1			the devise.
35 CSN1			
Non-inverting input to current balance sense amplifier for phase 3			
37 CSN3			
38CSP2Non-inverting input to current balance sense amplifier for phase 239CSN2Inverting input to current balance sense amplifier for phase 240CSP4Non-inverting input to current balance sense amplifier for phase 441CSN4Inverting input to current balance sense amplifier for phase 442IOUTTotal output current monitor for core output.43CSREFTotal output current sense amplifier reference voltage input.44CSSUMInverting input of total current sense amplifier for core output.45CSCOMPOutput of total current sense amplifier for core output.46DROOPUsed to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.47ILIMOver current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.48COMPOutput of the error amplifier and the inverting inputs of the PWM comparators for the core output.49TRBSTCompensation pin for the load transient boost.50FBError amplifier voltage feedback for core output51DIFFOUTOutput of the core differential remote sense amplifier.52VSNInverting input to the core differential remote sense amplifier.			
39CSN2Inverting input to current balance sense amplifier for phase 240CSP4Non-inverting input to current balance sense amplifier for phase 441CSN4Inverting input to current balance sense amplifier for phase 442IOUTTotal output current monitor for core output.43CSREFTotal output current sense amplifier reference voltage input.44CSSUMInverting input of total current sense amplifier for core output.45CSCOMPOutput of total current sense amplifier for core output.46DROOPUsed to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.47ILIMOver current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.48COMPOutput of the error amplifier and the inverting inputs of the PWM comparators for the core output.49TRBSTCompensation pin for the load transient boost.50FBError amplifier voltage feedback for core output51DIFFOUTOutput of the core differential remote sense amplifier.52VSNInverting input to the core differential remote sense amplifier.			
40CSP4Non-inverting input to current balance sense amplifier for phase 441CSN4Inverting input to current balance sense amplifier for phase 442IOUTTotal output current monitor for core output.43CSREFTotal output current sense amplifier reference voltage input.44CSSUMInverting input of total current sense amplifier for core output.45CSCOMPOutput of total current sense amplifier for core output.46DROOPUsed to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.47ILIMOver current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.48COMPOutput of the error amplifier and the inverting inputs of the PWM comparators for the core output.49TRBSTCompensation pin for the load transient boost.50FBError amplifier voltage feedback for core output51DIFFOUTOutput of the core differential remote sense amplifier.52VSNInverting input to the core differential remote sense amplifier.			
41CSN4Inverting input to current balance sense amplifier for phase 442IOUTTotal output current monitor for core output.43CSREFTotal output current sense amplifier reference voltage input.44CSSUMInverting input of total current sense amplifier for core output.45CSCOMPOutput of total current sense amplifier for core output.46DROOPUsed to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.47ILIMOver current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.48COMPOutput of the error amplifier and the inverting inputs of the PWM comparators for the core output.49TRBSTCompensation pin for the load transient boost.50FBError amplifier voltage feedback for core output51DIFFOUTOutput of the core differential remote sense amplifier.52VSNInverting input to the core differential remote sense amplifier.			
42IOUTTotal output current monitor for core output.43CSREFTotal output current sense amplifier reference voltage input.44CSSUMInverting input of total current sense amplifier for core output.45CSCOMPOutput of total current sense amplifier for core output.46DROOPUsed to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.47ILIMOver current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.48COMPOutput of the error amplifier and the inverting inputs of the PWM comparators for the core output.49TRBSTCompensation pin for the load transient boost.50FBError amplifier voltage feedback for core output51DIFFOUTOutput of the core differential remote sense amplifier.52VSNInverting input to the core differential remote sense amplifier.			
43CSREFTotal output current sense amplifier reference voltage input.44CSSUMInverting input of total current sense amplifier for core output.45CSCOMPOutput of total current sense amplifier for core output.46DROOPUsed to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.47ILIMOver current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.48COMPOutput of the error amplifier and the inverting inputs of the PWM comparators for the core output.49TRBSTCompensation pin for the load transient boost.50FBError amplifier voltage feedback for core output51DIFFOUTOutput of the core differential remote sense amplifier.52VSNInverting input to the core differential remote sense amplifier.			
44CSSUMInverting input of total current sense amplifier for core output.45CSCOMPOutput of total current sense amplifier for core output.46DROOPUsed to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.47ILIMOver current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.48COMPOutput of the error amplifier and the inverting inputs of the PWM comparators for the core output.49TRBSTCompensation pin for the load transient boost.50FBError amplifier voltage feedback for core output51DIFFOUTOutput of the core differential remote sense amplifier.52VSNInverting input to the core differential remote sense amplifier.			
45 CSCOMP  Output of total current sense amplifier for core output.  Used to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.  Over current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.  COMP  Output of the error amplifier and the inverting inputs of the PWM comparators for the core output.  Compensation pin for the load transient boost.  FB  Error amplifier voltage feedback for core output  Output of the core differential remote sense amplifier.  Inverting input to the core differential remote sense amplifier.			· · · · · · · · · · · · · · · · · · ·
Used to program droop function for core output. It's connected to the resistor divider placed between CSCOMP and CSREF summing node.  Over current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.  Output of the error amplifier and the inverting inputs of the PWM comparators for the core output.  Output.  COMP  TRBST  Compensation pin for the load transient boost.  FB  Error amplifier voltage feedback for core output  DIFFOUT  Output of the core differential remote sense amplifier.  Inverting input to the core differential remote sense amplifier.			
placed between CSCOMP and CSREF summing node.  Over current shutdown threshold setting for core output. Resistor to CSCOMP to set threshold.  Output of the error amplifier and the inverting inputs of the PWM comparators for the core output.  Output.  Output.  COMP  TRBST  Compensation pin for the load transient boost.  FB  Error amplifier voltage feedback for core output  DIFFOUT  Output of the core differential remote sense amplifier.  Inverting input to the core differential remote sense amplifier.	45	CSCOMP	
threshold.  COMP  Output of the error amplifier and the inverting inputs of the PWM comparators for the core output.  TRBST  Compensation pin for the load transient boost.  FB  Error amplifier voltage feedback for core output  DIFFOUT  Output of the core differential remote sense amplifier.  VSN  Inverting input to the core differential remote sense amplifier.	46	DROOP	placed between CSCOMP and CSREF summing node.
core output.  49 TRBST Compensation pin for the load transient boost.  50 FB Error amplifier voltage feedback for core output  51 DIFFOUT Output of the core differential remote sense amplifier.  52 VSN Inverting input to the core differential remote sense amplifier.	47	ILIM	threshold.
49       TRBST       Compensation pin for the load transient boost.         50       FB       Error amplifier voltage feedback for core output         51       DIFFOUT       Output of the core differential remote sense amplifier.         52       VSN       Inverting input to the core differential remote sense amplifier.	48	COMP	, , , , , , , , , , , , , , , , , , , ,
50       FB       Error amplifier voltage feedback for core output         51       DIFFOUT       Output of the core differential remote sense amplifier.         52       VSN       Inverting input to the core differential remote sense amplifier.	49	TRBST	Compensation pin for the load transient boost.
51DIFFOUTOutput of the core differential remote sense amplifier.52VSNInverting input to the core differential remote sense amplifier.			Error amplifier voltage feedback for core output
52 VSN Inverting input to the core differential remote sense amplifier.		DIFFOUT	
53   FLAG / GND	53	FLAG / GND	Power supply return (QFN Flag)

# Four Phase Plus One Phase Application Control Circuit

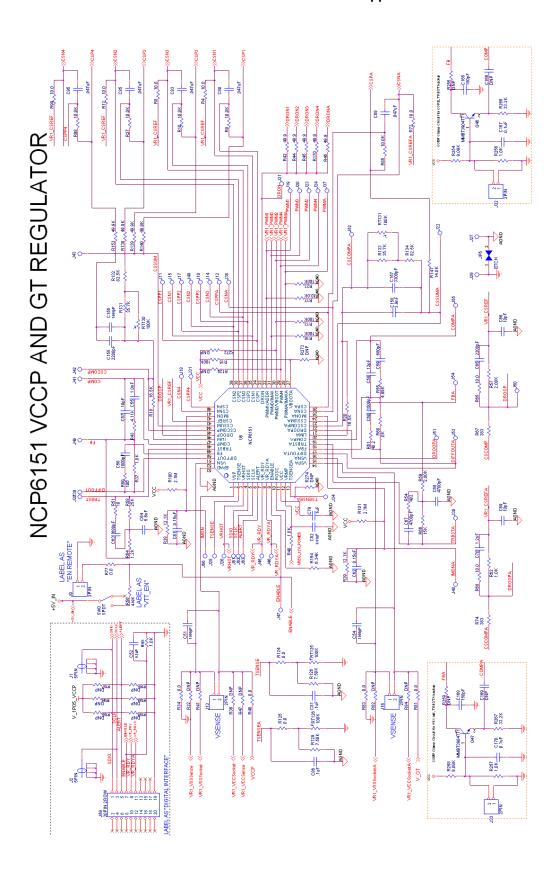

# **ABSOLUTE MAXIMUM RATINGS**

# **Electrical Information**

Pin Symbol	V <sub>MAX</sub>	V <sub>MIN</sub>
COMP,COMPA	VCC+0.3V	-0.3V
CSCOMP, CSCOMPA	VCC+0.3V	-0.3V
VSN	GND+300mV	GND-300mV
DIFFOUT, DIFFOUTA	VCC+0.3V	-0.3V
VR_RDY,VR_RDYA	VCC+0.3V	-0.3V
VCC	6.5V	-0.3V
ROSC	VCC+0.3V	-0.3V
IOUT, IOUTA Output	2.0 V	-0.3V
VRMP	+25V	-0.3V
All Other Pins	VCC+0.3V	-0.3 V

# \*All signals referenced to GND unless noted otherwise. Thermal Information

Thermal Characteristic QFN Package 1)	R <sub>θJA</sub>	68	°C/W
Operating Junction Temperature Range <sup>2)</sup>	ТЈ	-10 to 125	°C
Operating Ambient Temperature Range		-10 to 100	°C
Maximum Storage Temperature Range	T <sub>STG</sub>	- 40 to +150	°C
Moisture Sensitivity Level QFN Package	MSL	1	

<sup>\*</sup>The maximum package power dissipation must be observed. Notes:

<sup>1)</sup> JESD 51-5 (1S2P Direct-Attach Method) with 0 LFM

<sup>2)</sup> JESD 51-7 (1S2P Direct-Attach Method) with 0 LFM

# NCP6151/NCP6151A(4+1) ELECTRICAL CHARACTERISTICS Unless otherwise stated: -10°C<T<sub>A</sub><100°C; Vcc=5V; $C_{VCC}$ =0.1 $\mu$ F

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNITS
ERROR AMPLIFIER	•	•			
Input Bias Current	@ 1.3V	-400		400	nA
Open Loop DC Gain	CL = 20pF to GND, RL = $10K\Omega$ to GND		80		dB
Open Loop Unity Gain Bandwidth	CL = 20pF to GND, RL = $10K\Omega$ to GND		55		MHz
Slew Rate	Δ <b>Vin = 100mV, G = -10V/V,</b> ΔVout = 1.5V – 2.5V, CL = 20pF to GND, DC Load = 10k to GND		20		V/μs
Maximum Output Voltage	I <sub>SOURCE</sub> = 2.0mA	3.5	-	-	V
Minimum Output Voltage	I <sub>SINK</sub> = 2.0mA	-	-	1	V
Differential Summing Amplifier					
Input Bias Current	VSP, VSPA ,VSN, VSNA=1.3V	-400	-	400	nA
VSP Input Voltage Range		-0.3	-	3.0	V
VSN Input Voltage Range		-0.3	-	0.3	V
-3dB Bandwidth	CL = 20pF to GND, RL = $10K\Omega$ to GND		12		MHz
Closed Loop DC gain	VS+ to VS- = 0.5 to 1.3V		1.0		V/V
Droop Accuracy	CSREF-DROOP=80mV DAC=0.8V to 1.2V	-81.5		-78.5	mV

# **ELECTRICAL CHARACTERISTICS:**

Unless otherwise stated:  $-10^{\circ}\text{C}<\text{T}_{\text{A}}<100^{\circ}\text{C}; \text{Vcc=5V}; \text{C}_{\text{VCC}}=0.1 \mu\text{F}$ 

PARAMETER	TEST CONDITION	MIN	TYP	MAX	UNITS
CURRENT SUMMING AMPLIFIER	₹				
Offset Voltage (Vos), note 3		-300		300	uV
Input Bias Current	CSSUM=CSREF= 1V	-7.5		7.5	nA
Open Loop Gain			80		dB
Current Sense Unity Gain	$C_L = 20pF \text{ to GND},$		40		
Bandwidth	$R_L = 10K\Omega$ to GND		10		MHz
Maximum CSCOMP (A) Output	Isource = 2mA	2.5			.,
Voltage	CSSUM(A)=CSCOMP(A)	3.5	-	_	V
Minimum CSCOMP(A) Output	Isink = 2mA			0.15	V
Voltage	CSSUM(A)=CSCOMP(A)	-	-	0.15	V
CURRENT BALANCE AMPLIFIE	R				
Input Bias Current	CSP <sub>1-4</sub> =CSN <sub>1-4</sub> =1.2V	-50		50	nA
Input Bias Current	CSPA=CSNA=1.2V	-100	-	100	IIA
Common Mode Input Voltage Rar	nge CSPx=CSNx	0	-	2.0	V
Differential Mode Input Voltage	CSNx=1.2V	-100		100	mV
Range	OSINA-1.2V	-100		100	IIIV
	CSPx=CSNx =1.2V,				
Input Offset Voltage Matching	Measured from the average	-1.5	-	1.5	mV
	-				
Current Sense Amplifier Gain	0V < CSPx-CSNx < 0.1V,	5.7	6.0	6.3	V/V
·	·				
Multiphase Current Sense Gain	OON OOD 40\/ t- 20\/	0		3	0/
Matching	CSN=CSP=10mV to 30mV	-3		3	%
-3dB Bandwidth					MHz
INPUT SUPPLY					
Supply Voltage Range		4.75		5.25	V
VCC Quiescent Current	EN=high		38	43	mA
	EN=low			5	mA
UVLO Threshold	VCC rising			4.5	V
	VCC falling	4.1			V
VCC UVLO Hysteresis			160		mV
DAC SLEW RATE					
Soft Start Slew Rate			2.5		mv/us
Slew Rate Slow			5		mv/us
Slew Rate Fast			20		mv/us
AUX Soft Start Slew Rate			2.5		mv/us
AUX Slew Rate Slow			2.5		mv/us
		1	10		mv/us
AUX Slew Rate Fast					
ENABLE INPUT			1 .0		
	External 1K pull-up to 3.3V	<u> </u>		1.0	μА
ENABLE INPUT	External 1K pull-up to 3.3V  Vupper	- 0.8		1.0	μA
ENABLE INPUT  Enable High Input Leakage Current Upper Threshold Lower Threshold				1.0	
ENABLE INPUT Enable High Input Leakage Current Upper Threshold	V <sub>UPPER</sub> V <sub>LOWER</sub> V <sub>UPPER</sub> - V <sub>LOWER</sub>		90		V
ENABLE INPUT Enable High Input Leakage Current Upper Threshold Lower Threshold Total Hysteresis	V <sub>UPPER</sub> V <sub>LOWER</sub> V <sub>UPPER</sub> - V <sub>LOWER</sub> Measure time from Enable				V
ENABLE INPUT  Enable High Input Leakage Current Upper Threshold Lower Threshold	V <sub>UPPER</sub> V <sub>LOWER</sub> V <sub>UPPER</sub> - V <sub>LOWER</sub>				V

# **ELECTRICAL CHARACTERISTICS:**

Unless otherwise stated:  $-10^{\circ}\text{C} < T_A < 100^{\circ}\text{C}$ ; Vcc=5V;  $C_{\text{VCC}} = 0.1 \mu\text{F}$ 

PARAMETER	TEST CONDITION	MIN	TYP	MAX	UNITS
DRVON					
Output High Voltage	Sourcing 500uA	3.0			V
Output Low Voltage	Sinking 500uA			0.1	V
Rise/Fall Time	CL (PCB) = 20pF, ΔVo = 10% to 90%	-	10		ns
Internal Pull Down Resistance	EN = Low		70		kΩ
IOUT / IOUTA OUTPUT	•			•	•
Input Referred Offset Voltage	Ilimit to CSREF	-1.5		1.5	mV
Output Source Current	Ilimit sink current= 80uA			800	uA
Current Gain	(IOUT <sub>CURRENT</sub> ) / (ILIMIT <sub>CURRENT</sub> ), R <sub>ILIM</sub> = 20k, R <sub>IOUT</sub> = 5.0k, DAC=0.8V,1.25V,1.52V	9.5	10	10.5	-
OSCILLATOR				•	•
Switching Frequency Range		200	-	1000	KHz
4 Phase Operation	Rτ=6.98 kΩ	315	350	385	kHz
Rosc Output Voltage	Rτ=6.98 kΩ	1.95	2.00	2.05	V
	R VOLTAGE PROTECTION (OVP & UVP)	1.00	2.00	2.00	•
Absolute Over Voltage Threshold					
During Soft Start	CSREF, CSNA	1.9	2.0	2.1	V
Over Voltage Threshold Above DAC	VSP(A) rising	150	175	200	mV
Over Voltage Delay	VSP(A) rising to PWMx low		50		ns
Under Voltage Threshold Below DAC-DROOP	VSP(A) falling	250	300	350	mV
Jnder-voltage Delay			5		us
VR12 DAC					
	1.0 V ≤ DAC < 1.52 V	-0.5		0.5	%
2 - 1 Mallana A	0.8V< DAC < 0.995 V	-5		5	mV
System Voltage Accuracy	0.25V < DAC < 0.795 V	-8		8	mV
Droop Feed-Forward Up Current	Measured on DROOP, DROOPA	58	65	72	μA
Droop Feed-Forward Down current	Measured on DROOP, DROOPA	19	25	31	uA
Droop Feed-Forward Pulse On-Time			0.16	1	μs
OVERCURRENT PROTECTION (CO	RF RAII )		00	1	F-0
LIM Threshold Current (OCP	,				_
shutdown after 50 us delay)	(PS0) Rlim=20k	9.0	10	11.0	μA
LIM Threshold Current (immediate OCP shutdown)	(PS0) Rlim=20k	13.5	15	16.5	μΑ
LIM Threshold Current (OCP	(PS1, PS2, PS3) Rlim=20k, N=number		10/N		
shutdown after 50 us delay)	of phases in PS0 mode		10/11		μA
LIM Threshold Current (immediate	(PS1, PS2, PS3) Rlim=20k, N=number		15/N		
OCP shutdown)	of phases in PS0 mode		10/11		μΑ
OVERCURRENT PROTECTION (+1				<u> </u>	
LIM Threshold Current (OCP					
shutdown after 50 us delay)	(PS0) Rlim=20k	8.5	10	11.5	μA
LIM Threshold Current (immediate OCP shutdown)	(PS0) Rlim=20k	13.5	15	16.5	μA
LIM Threshold Current (OCP shutdown after 50 us delay)	(PS1, PS2, PS3) Rlim=20k, N=phase number in PS0 mode		10		μA
LIM Threshold Current (immediate	(PS1, PS2, PS3) Rlim=20k, N=phase number in PS0 mode		15		μA

ELECTRICAL CHARACTERISTICS: Unless otherwise stated: --10°C<T\_A<100°C; Vcc=5V;  $C_{VCC}$ =0.1 $\mu$ F

PARAMETER	TEST CONDITION	MIN	TYP	MAX	UNITS
MODULATORS (PWM COMPARATOR					
0% Duty Cycle	COMP voltage when the PWM outputs remain LO		1.3	-	V
100% Duty Cycle	COMP voltage when the PWM outputs remain HI VRMP=12.0V	-	2.5	-	V
PWM Ramp Duty Cycle Matching	COMP=2V, PWM Ton matching		1		%
PWM Phase Angle Error	Between adjacent phases	-15		15	deg
Ramp Feed-forward Voltage range	, , , , , , , , , , , , , , , , , , ,	5		20	V
TRBST					
TRBST/COMP offset	TRBST Starts Sinking Current		350		mV
TRBST Sink Capability			500		uA
TRBSTA	•				
TRBSTA/COMPA offset	TRBST Starts Sinking Current		350		mV
TRBSTA Sink Capability	_		500		uA
VR_HOT#	•				
Output Low Voltage	I_vrhot = -4mA			0.3	V
Output Leakage Current	High Impedance State	-1.0	-	1.0	μA
TSENSE/TSENSEA	, , , , , , , , , , , , , , , , , , ,				
Alert# Assert Threshold			513		mV
Alert# De-assert Threshold			491		mV
VRHOT Assert Threshold			472		mV
VRHOT Rising Threshold			494		mV
TSENSE Bias Current		117.6	120	122.4	
ADC		117.0	120	122.4	μΑ
Voltage Range		0		2	V
Total Unadjusted Error (TUE)		-1		+1	
Differential Nonlinearity (DNL)	8-bit	-1		1	LSB
Power Supply Sensitivity	O-Dit		+/-1	ı	<u> </u>
Conversion Time			30		
Round Robin			90		μS
VR_RDY, VR_RDYA (POWER GOOD	)) OUTPUT		90		μS
Output Low Saturation Voltage	I <sub>VR RDY(A)</sub> = 4mA,		_	0.3	V
Rise Time	External pull-up of 1K $\Omega$ to 3.3V, C <sub>TOT</sub> = 45pF, $\Delta$ Vo = 10% to 90%	-	100	0.5	ns
Fall Time	External pull-up of 1K $\Omega$ to 3.3V, C <sub>TOT</sub> = 45pF, $\Delta$ Vo = 90% to 10%		10		ns
Output Voltage at Power-up	VR_RDY, VR_RDYA pulled up to 5V via 2KΩ	-	-	1.0	V
Output Leakage Current When High	VR_RDY & VR_RDYA = 5.0V	-1.0	-	1.0	μΑ
VR_RDY Delay (rising)	DAC=TARGET to VR RDY		500		μS
VR RDY Delay (falling)	From OCP or OVP	-	5	-	μS
PWM Outputs			•		
Output High Voltage	Sourcing 500uA	VCC - 0.2V	-	-	V
Output Mid Voltage	No Load, SetPS=02	1.9	2.0	2.1	V
Output Low Voltage	Sinking 500uA	-	-	0.7	V
Rise and Fall Time	CL (PCB) = 50pF, ΔVo = GND to VCC	-	10		ns
Phase Detection			•	•	•
PWM Pin Source Current			100		μA
PWM Pin Threshold Voltage			3.3		V
Phase Detect Timer			20		μs
SCLK, SDIO					
$V_{lL}$	Input Low Voltage			.45	V
	Land Clean Addition	.65			V
V <sub>IH</sub> V <sub>OH</sub>	Input High Voltage Output High Voltage	.00	1.05		V

# **ELECTRICAL CHARACTERISTICS:**

Unless otherwise stated:  $-10^{\circ}\text{C} < T_A < 100^{\circ}\text{C}$ ; Vcc=5V;  $C_{\text{VCC}} = 0.1 \mu\text{F}$ 

Parameter	Test Condition	MIN	TYP	MAX	Units
Ron	Buffer On Resistance (data line, ALERT#, and VRHOT)	4		13	Ω
Leakage Current		-100		100	μA
Pad Capacitance, note 3				4.0	pF
VR clock to data delay (Tco), note 3		4		8.3	ns
Setup time (Tsu), note 3		7			ns
Hold time (Thld), note 3		14			ns

# Notes:

3) Guaranteed by design or characterization data, not in production test;

Table 2: VR12 VID Codes

VID7	VID6	VID5	VID4	VID3	VID2	VID1	VID0	Voltage (V)	HEX
0	0	0	0	0	0	0	0	OFF	00
0	0	0	0	0	0	0	1	0.25000	01
0	0	0	0	0	0	1	0	0.25500	02
0	0	0	0	0	0	1	1	0.26000	03
0	0	0	0	0	1	0	0	0.26500	04
0	0	0	0	0	1	0	1	0.27000	05
0	0	0	0	0	1	1	0	0.27500	06
0	0	0	0	0	1	1	1	0.28000	07
0	0	0	0	1	0	0	0	0.28500	08
0	0	0	0	1	0	0	1	0.29000	09
0	0	0	0	1	0	1	0	0.29500	0A
0	0	0	0	1	0	1	1	0.30000	0B
0	0	0	0	1	1	0	0	0.30500	0C
0	0	0	0	1	1	0	1	0.31000	0D
0	0	0	0	1	1	1	0	0.31500	0E
0	0	0	0	1	1	1	1	0.32000	0F
0	0	0	1	0	0	0	0	0.32500	10
0	0	0	1	0	0	0	1	0.33000	11
0	0	0	1	0	0	1	0	0.33500	12
0	0	0	1	0	0	1	1	0.34000	13
0	0	0	1	0	1	0	0	0.34500	14
0	0	0	1	0	1	0	1	0.35000	15
0	0	0	1	0	1	1	0	0.35500	16
0	0	0	1	0	1	1	1	0.36000	17
0	0	0	1	1	0	0	0	0.36500	18
0	0	0	1	1	0	0	1	0.37000	19
0	0	0	1	1	0	1	0	0.37500	1A
0	0	0	1	1	0	1	1	0.38000	1B
0	0	0	1	1	1	0	0	0.38500	1C
0	0	0	1	1	1	0	1	0.39000	1D
0	0	0	1	1	1	1	0	0.39500	1E
0	0	0	1	1	1	1	1	0.40000	1F
0	0	1	0	0	0	0	0	0.40500	20
0	0	1	0	0	0	0	1	0.41000	21
0	0	1	0	0	0	1	0	0.41500	22
0	0	1	0	0	0	1	1	0.42000	23
0	0	1	0	0	1	0	0	0.42500	24
0	0	1	0	0	1	0	1	0.43000	25
0	0	1	0	0	1	1	0	0.43500	26

Table 2: VR12 VID Codes (cont'd)

VID7	VID6	VID5	VID4	VID3	VID2	VID1	VID0	Voltage (V)	HEX
0	0	1	0	0	1	1	1	0.44000	27
0	0	1	0	1	0	0	0	0.44500	28
0	0	1	0	1	0	0	1	0.45000	29
0	0	1	0	1	0	1	0	0.45500	2A
0	0	1	0	1	0	1	1	0.46000	2B
0	0	1	0	1	1	0	0	0.46500	2C
0	0	1	0	1	1	0	1	0.47000	2D
0	0	1	0	1	1	1	0	0.47500	2E
0	0	1	0	1	1	1	1	0.48000	2F
0	0	1	1	0	0	0	0	0.48500	30
0	0	1	1	0	0	0	1	0.49000	31
0	0	1	1	0	0	1	0	0.49500	32
0	0	1	1	0	0	1	1	0.50000	33
0	0	1	1	0	1	0	0	0.50500	34
0	0	1	1	0	1	0	1	0.51000	35
0	0	1	1	0	1	1	0	0.51500	36
0	0	1	1	0	1	1	1	0.52000	37
0	0	1	1	1	0	0	0	0.52500	38
0	0	1	1	1	0	0	1	0.53000	39
0	0	1	1	1	0	1	0	0.53500	3A
0	0	1	1	1	0	1	1	0.54000	3B
0	0	1	1	1	1	0	0	0.54500	3C
0	0	1	1	1	1	0	1	0.55000	3D
0	0	1	1	1	1	1	0	0.55500	3E
0	0	1	1	1	1	1	1	0.56000	3F
0	1	0	0	0	0	0	0	0.56500	40
0	1	0	0	0	0	0	1	0.57000	41
0	1	0	0	0	0	1	0	0.57500	42
0	1	0	0	0	0	1	1	0.58000	43
0	1	0	0	0	1	0	0	0.58500	44
0	1	0	0	0	1	0	1	0.59000	45
0	1	0	0	0	1	1	0	0.59500	46
0	1	0	0	0	1	1	1	0.60000	47
0	1	0	0	1	0	0	0	0.60500	48
0	1	0	0	1	0	0	1	0.61000	49
0	1	0	0	1	0	1	0	0.61500	4A
0	1	0	0	1	0	1	1	0.62000	4B
0	1	0	0	1	1	0	0	0.62500	4C
0	1	0	0	1	1	0	1	0.63000	4D
0	1	0	0	1	1	1	0	0.63500	4E
0	1	0	0	1	1	1	1	0.64000	4F
0	1	0	1	0	0	0	0	0.64500	50
0	1	0	1	0	0	0	1	0.65000	51
0	1	0	1	0	0	1	0	0.65500	52
0	1	0	1	0	0	1	1	0.66000	53
0	1	0	1	0	1	0	0	0.66500	54
0	1	0	1	0	1	0	1	0.67000	55
0	1	0	1	0	1	1	0	0.67500	56
0	1	0	1	0	1	1	1	0.68000	57
0	1	0	1	1	0	0	0	0.68500	58

Table 2: VR12 VID Codes (cont'd)

VID7	VID6	VID5	VID4	VID3	VID2	VID1	VID0	Voltage (V)	HEX
0	1	0	1	1	0	0	1	0.69000	59
0	1	0	1	1	0	1	0	0.69500	5A
0	1	0	1	1	0	1	1	0.70000	5B
0	1	0	1	1	1	0	0	0.70500	5C
0	1	0	1	1	1	0	1	0.71000	5D
0	1	0	1	1	1	1	0	0.71500	5E
0	1	0	1	1	1	1	1	0.72000	5F
0	1	1	0	0	0	0	0	0.72500	60
0	1	1	0	0	0	0	1	0.73000	61
0	1	1	0	0	0	1	0	0.73500	62
0	1	1	0	0	0	1	1	0.74000	63
0	1	1	0	0	1	0	0	0.74500	64
0	1	1	0	0	1	0	1	0.75000	65
0	1	1	0	0	1	1	0	0.75500	66
0	1	1	0	0	1	1	1	0.76000	67
0	1	1	0	1	0	0	0	0.76500	68
0	1	1	0	1	0	0	1	0.77000	69
0	1	1	0	1	0	1	0	0.77500	6A
0	1	1	0	1	0	1	1	0.78000	6B
0	1	1	0	1	1	0	0	0.78500	6C
0	1	1	0	1	1	0	1	0.79000	6D
0	1	1	0	1	1	1	0	0.79500	6E
0	1	1	0	1	1	1	1	0.80000	6F
0	1	1	1	0	0	0	0	0.80500	70
0	1	1	1	0	0	0	1	0.81000	71
0	1	1	1	0	0	1	0	0.81500	72
0	1	1	1	0	0	1	1	0.82000	73
0	1	1	1	0	1	0	0	0.82500	74
0	1	1	1	0	1	0	1	0.83000	75
0	1	1	1	0	1	1	0	0.83500	76
0	1	1	1	0	1	1	1	0.84000	77
0	1	1	1	1	0	0	0	0.84500	78
0	1	1	1	1	0	0	1	0.85000	79
0	1	1	1	1	0	1	0	0.85500	7A
0	1	1	1	1	0	1	1	0.86000	7B
0	1	1	1	1	1	0	0	0.86500	7C
0	1	1	1	1	1	0	1	0.87000	7D
0	1	1	1	1	1	1	0	0.87500	7E
0	1	1	1	1	1	1	1	0.88000	7F
1	0	0	0	0	0	0	0	0.88500	80
1	0	0	0	0	0	0	1	0.89000	81
1	0	0	0	0	0	1	0	0.89500	82
1	0	0	0	0	0	1	1	0.90000	83
1	0	0	0	0	1	0	0	0.90500	84
1	0	0	0	0	1	0	1	0.91000	85
1	0	0	0	0	1	1	0	0.91500	86
1	0	0	0	0	1	1	1	0.92000	87
1	0	0	0	1	0	0	0	0.92500	88
1	0	0	0	1	0	0	1	0.93000	89
1	0	0	0	1	0	1	0	0.93500	8A
1	0	0	0	1	0	1	1	0.94000	8B

Table 2: VR12 VID Codes (cont'd)

VID7	VID6	VID5	VID4	VID3	VID2	VID1	VID0	Voltage (V)	HEX
1	0	0	0	1	1	0	0	0.94500	8C
1	0	0	0	1	1	0	1	0.95000	8D
1	0	0	0	1	1	1	0	0.95500	8E
1	0	0	0	1	1	1	1	0.96000	8F
1	0	0	1	0	0	0	0	0.96500	90
1	0	0	1	0	0	0	1	0.97000	91
1	0	0	1	0	0	1	0	0.97500	92
1	0	0	1	0	0	1	1	0.98000	93
1	0	0	1	0	1	0	0	0.98500	94
1	0	0	1	0	1	0	1	0.99000	95
1	0	0	1	0	1	1	0	0.99500	96
1	0	0	1	0	1	1	1	1.00000	97
1	0	0	1	1	0	0	0	1.00500	98
1	0	0	1	1	0	0	1	1.01000	99
1	0	0	1	1	0	1	0	1.01500	9A
1	0	0	1	1	0	1	1	1.02000	9B
1	0	0	1	1	1	0	0	1.02500	9C
1	0	0	1	1	1	0	1	1.03000	9D
1	0	0	1	1	1	1	0	1.03500	9E
1	0	0	1	1	1	1	1	1.04000	9F
1	0	1	0	0	0	0	0	1.04500	A0
1	0	1	0	0	0	0	1	1.05000	A1
1	0	1	0	0	0	1	0	1.05500	A2
1	0	1	0	0	0	1	1	1.06000	A3
1	0	1	0	0	1	0	0	1.06500	A4
1	0	1	0	0	1	0	1	1.07000	A5
1	0	1	0	0	1	1	0	1.07500	A6
1	0	1	0	0	1	1	1	1.08000	A7
1	0	1	0	1	0	0	0	1.08500	A8
1	0	1	0	1	0	0	1	1.09000	A9
1	0	1	0	1	0	1	0	1.09500	AA
1	0	1	0	1	0	1	1	1.10000	AB
1	0	1	0	1	1	0	0	1.10500	AC
1	0	1	0	1	1	0	1	1.11000	AD
1	0	1	0	1	1	1	0	1.11500	AE
1	0	1	0	1	1	1	1	1.12000	AF
1	0	1	1	0	0	0	0	1.12500	B0
1	0	1	1	0	0	0	1	1.13000	B1
1	0	1	1	0	0	1	0	1.13500	B2
1	0	1	1	0	0	1	1	1.14000	B3
1	0	1	1	0	1	0	0	1.14500	B4


Table 2: VR12 VID Codes (cont'd)

VID7	VID6	VID5	VID4	VID3	VID2	VID1	VID0	Voltage (V)	HEX
1	0	1	1	0	1	0	1	1.15000	B5
1	0	1	1	0	1	1	0	1.15500	B6
1	0	1	1	0	1	1	1	1.16000	B7
1	0	1	1	1	0	0	0	1.16500	B8
1	0	1	1	1	0	0	1	1.17000	B9
1	0	1	1	1	0	1	0	1.17500	BA
1	0	1	1	1	0	1	1	1.18000	BB
1	0	1	1	1	1	0	0	1.18500	BC
1	0	1	1	1	1	0	1	1.19000	BD
1	0	1	1	1	1	1	0	1.19500	BE
1	0	1	1	1	1	1	1	1.20000	BF
1	1	0	0	0	0	0	0	1.20500	C0
1	1	0	0	0	0	0	1	1.21000	C1
1	1	0	0	0	0	1	0	1.21500	C2
1	1	0	0	0	0	1	1	1.22000	C3
1	1	0	0	0	1	0	0	1.22500	C4
1	1	0	0	0	1	0	1	1.23000	C5
1	1	0	0	0	1	1	0	1.23500	C6
1	1	0	0	0	1	1	1	1.24000	C7
1	1	0	0	1	0	0	0	1.24500	C8
1	1	0	0	1	0	0	1	1.25000	C9
1	1	0	0	1	0	1	0	1.25500	CA
1	1	0	0	1	0	1	1	1.26000	СВ
1	1	0	0	1	1	0	0	1.26500	CC
1	1	0	0	1	1	0	1	1.27000	CD
1	1	0	0	1	1	1	0	1.27500	CE
1	1	0	0	1	1	1	1	1.28000	CF
1	1	0	1	0	0	0	0	1.28500	D0
1	1	0	1	0	0	0	1	1.29000	D1
1	1	0	1	0	0	1	0	1.29500	D2
1	1	0	1	0	0	1	1	1.30000	D3
1	1	0	1	0	1	0	0	1.30500	D4
1	1	0	1	0	1	0	1	1.31000	D5
1	1	0	1	0	1	1	0	1.31500	D6
1	1	0	1	0	1	1	1	1.32000	D7
1	1	0	1	1	0	0	0	1.32500	D8
1	1	0	1	1	0	0	1	1.33000	D9
1	1	0	1	1	0	1	0	1.33500	DA
1	1	0	1	1	0	1	1	1.34000	DB
1	1	0	1	1	1	0	0	1.34500	DC
1	1	0	1	1	1	0	1	1.35000	DD


Table 2: VR12 VID Codes (cont'd)

VID7	VID6	VID5	VID4	VID3	VID2	VID1	VID0	Voltage (V)	HEX
1	1	0	1	1	1	1	0	1.35500	DE
1	1	0	1	1	1	1	1	1.36000	DF
1	1	1	0	0	0	0	0	1.36500	E0
1	1	1	0	0	0	0	1	1.37000	E1
1	1	1	0	0	0	1	0	1.37500	E2
1	1	1	0	0	0	1	1	1.38000	E3
1	1	1	0	0	1	0	0	1.38500	E4
1	1	1	0	0	1	0	1	1.39000	E5
1	1	1	0	0	1	1	0	1.39500	E6
1	1	1	0	0	1	1	1	1.40000	E7
1	1	1	0	1	0	0	0	1.40500	E8
1	1	1	0	1	0	0	1	1.41000	E9
1	1	1	0	1	0	1	0	1.41500	EA
1	1	1	0	1	0	1	1	1.42000	EB
1	1	1	0	1	1	0	0	1.42500	EC
1	1	1	0	1	1	0	1	1.43000	ED
1	1	1	0	1	1	1	0	1.43500	EE
1	1	1	0	1	1	1	1	1.44000	EF
1	1	1	1	0	0	0	0	1.44500	F0
1	1	1	1	0	0	0	1	1.45000	F1
1	1	1	1	0	0	1	0	1.45500	F2
1	1	1	1	0	0	1	1	1.46000	F3
1	1	1	1	0	1	0	0	1.46500	F4
1	1	1	1	0	1	0	1	1.47000	F5
1	1	1	1	0	1	1	0	1.47500	F6
1	1	1	1	0	1	1	1	1.48000	F7
1	1	1	1	1	0	0	0	1.48500	F8
1	1	1	1	1	0	0	1	1.49000	F9
1	1	1	1	1	0	1	0	1.49500	FA
1	1	1	1	1	0	1	1	1.50000	FB
1	1	1	1	1	1	0	0	1.50500	FC
1	1	1	1	1	1	0	1	1.51000	FD
1	1	1	1	1	1	1	0	1.51500	FE
1	1	1	1	1	1	1	1	1.52000	FF



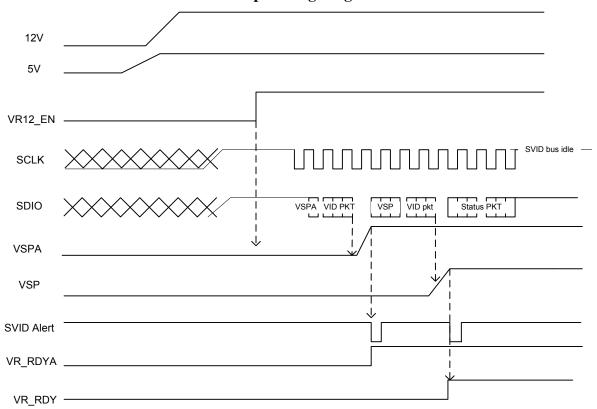


# **SVID Timing Diagram**

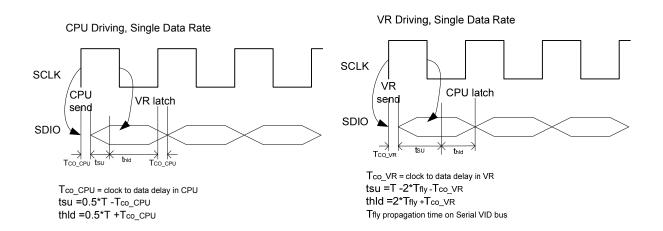

# **State Truth Table**

STATE	VR_RDY(A) Pin	Error AMP Comp(A) Pin	OVP(A)	DRVON	Method of Reset
	FIII	Comp(A) Fin	& UVP(A)	PIN	Keset
POR	N/A	N/A	N/A	Resistive pull	
0 <vcc<uvlo< td=""><td></td><td></td><td></td><td>down</td><td></td></vcc<uvlo<>				down	
Disabled	Low	Low	Disabled	Low	
EN < threshold					
UVLO >threshold					
Start up Delay &	Low	Low	Disabled	Low	
Calibration					
EN> threshold					
UVLO>threshold					
DRVON Fault	Low	Low	Disabled	Resistive pull up	Driver must
EN> threshold					release DRVON to
UVLO>threshold					high
DRVON <threshold< td=""><td></td><td></td><td></td><td></td><td></td></threshold<>					
Soft Start	Low	Operational	Active /	High	
EN > threshold			No latch		
UVLO >threshold					
DRVON > High					
Normal Operation	High	Operational	Active /	High	N/A
EN > threshold			Latching		
UVLO >threshold					
DRVON > High					
Over Voltage	Low	N/A	DAC+150mV	High	
Over Current	Low	Operational	Last DAC Code	Low	
VID Code = 00h	Low: if	Clamped to	Disabled	High,	
	Reg34h:bit0=0;	0.9V		PWM outputs in	
	High:if Reg34h:bit0=1;			mid state	

# **State Diagram**

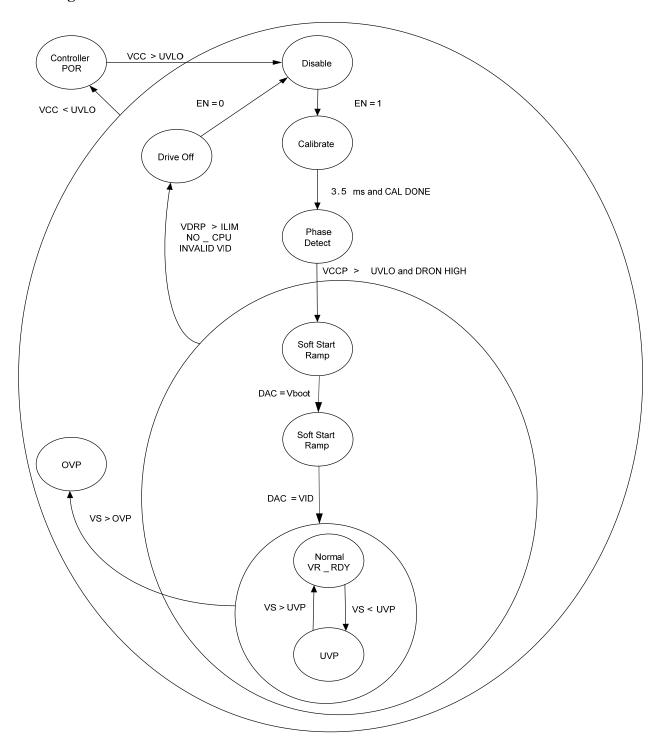

#### General

The NCP6151/NCP6151A is a dual output four phase plus one phase dual edge modulated multiphase PWM controller designed to meet the Intel VR12 specifications with a serial SVID control interface. The NCP6151/NCP6151A implements PS0, PS1, PS2 and PS3 power saving states. NCP6151A support coupled inductor operation. It operates with 2 phases versus NCP6151 operating with single phase during PS1 mode.

#### For NCP6151 Core Rail:

Power Status	PWM Output Operating Mode
PS0	Multi-phase PWM interleaving output
PS1	Single-phase RPM CCM mode (PWM1 only, PWM2~4 stay in Mid)
PS2	Single-phase RPM DCM mode (PWM1 only, PWM2~4 stay in Mid)
PS3	Existing definition is same as PS2

#### For NCP6151A Core Rail:

Power Status	PWM Output Operating Mode
PS0	Multi-phase PWM interleaving output
PS1	Two Phase PWM1 & PWM3
PS2	RPM PWM1 with sync diode behavior on PWM3
PS3	Existing definition is same as PS2

#### For NCP6151/NCP6151A AUX Rail:

Power Status	PWM Output Operating Mode
PS0	Single-phase PWM output
PS1	Same as PS0
PS2	Single-phase RPM DCM mode
PS3	Existing definition is same as PS2

For NCP6151/NCP6151A, VID code change is supported by SVID interface with three options as below:

Option	SVID Command Code	Feature	Register Address ( Indicating the slew rate of VID code change)
SetVID_Fast	01h	>10mV/us VID code change slew rate	24h
SetVID_Slow	02h	=1/4 of SetVID_Fast VID code change slew rate	25h
SetVID_Decay	03h	No control, VID code down	N/A

#### **Serial VID**

The NCP6151/NCP6151A supports the Intel serial VID interface. It communicates with the microprocessor through three wires (SCLK, SDIO, ALERT#). The table of supported registers is shown below.

Index	Name	Description	Access	Default
00h	Vendor ID	Uniquely identifies the VR vendor. The vendor ID	R	0x1Ah
		assigned by Intel to ON Semiconductor is 0x1Ah		
01h	Product ID	Uniquely identifies the VR product. The VR vendor	R	0x51
		assigns this number.		
02h	Product	Uniquely identifies the revision or stepping of the VR	R	0x0A
	Revision	control IC. The VR vendor assigns this data.		
05h	Protocol ID	Identifies the SVID Protocol the NCP6151 supports	R	0x01
06h	Capability	Informs the Master of the NCP6151's Capabilities, 1 =	R	0xC7
		supported, 0 = not supported		
		Bit 7 = lout_format. Bit 7 = 0 when 1A = 1LSB of Reg		
		15h. Bit 7 = 1 when Reg 15 FFh = Icc_Max. Default = 1		

			1	T
		Bit 6 = ADC Measurement of Temp Supported = 1		
		Bit 5 = ADC Measurement of Pin Supported = 0		
		Bit 4 = ADC Measurement of Vin Supported = 0		
		Bit 3 = ADC Measurement of Iin Supported = 0		
		Bit 2 = ADC Measurement of Pout Supported = 1		
		Bit 1 = ADC Measurement of Vout Supported = 1		
		Bit 0 = ADC Measurement of lout Supported = 1		
07h	Generic ID	51h or 31h, depending on the generic	R	51h or 31h
10h	Status 1	Data register read after the ALERT# signal is asserted.	R	00h
	_	Conveying the status of the VR.		
11h	Status 2	Data register showing optional status_2 data.	R	00h
12h	Temp zone	Data register showing temperature zones the system is	R	00h
		operating in		
15h	I out	8 bit binary word ADC of current. This register reads	R	01h
1011	1_000	0xFF when the output current is at Icc Max	'`	0111
16h	V out	8 bit binary word ADC of output voltage, measured	R	01h
1011	v_out	between VSP and VSN. LSB size is 8mV	1	0111
17h	VR_Temp	8 bit binary word ADC of voltage. Binary format in deg	R	01h
1711	VK_Tellip		K	0111
		C, IE 100C=64h. A value of 00h indicates this function		
401-	Dt	is not supported	Б	041-
18h	P_out	8 bit binary word representative of output power. The	R	01h
		output voltage is multiplied by the output current value		
		and the result is stored in this register. A value of 00h		
		indicates this function is not supported		
1Ch	Status 2 Last		R	00h
	read	copied into this register. The format is the same as the		
		Status 2 Register.		
21h	Icc_Max	Data register containing the Icc_Max the platform	R	00h
		supports. The value is measured on the ICCMAX pin		
		on power up and placed in this register. From that point		
		on the register is read only.		
22h	Temp_Max	Data register containing the max temperature the	R/W	64h
		platform supports and the level VR_hot asserts. This		
		value defaults to 100°C and programmable over the		
		SVID Interface		
24h	SR fast	Slew Rate for SetVID_fast commands. Binary format in	R	0Ah
		mV/us.		
25h	SR_slow	Slew Rate for SetVID slow commands. It is 4X slower	R	02h
2011	011_01011	than the SR_fast rate. Binary format in mV/us	' `	0211
26h	Vboot	The Vboot is programmed using resistors on the Vboot	R	00h
2011	V 500t	pin which is sensed on power up. The NCP6151 will	'`	0011
		ramp to Vboot and hold at Vboot until it receives a new		
		SVID SetVID command to move to a different voltage.		
30h	Vout_Max	Programmed by master and sets the maximum VID the	RW	FBh
5011	VOUL_IVIAX	VR will support. If a higher VID code is received, the	1744	ווט ו
		VR should respond with "not supported" acknowledge.		
		VR 12 VID format.		
31h	VID setting	Data register containing currently programmed VID	RW	00h
3111	vio settiilg		LZAA	0011
206	Dum Ctata	voltage. VID data format.	DW	006
32h	Pwr State	Register containing the current programmed power	RW	00h
001		state.	DW	001
33h	Offset	Sets offset in VID steps added to the VID setting for	RW	00h
33h			RW	00h

		steps for margin 2s complement.  00h=no margin  01h=+1 VID step  02h=+2 VID steps FFh=-1 VID step	
		FEh=-2 VID steps.	
34h	MultiVR Config		

#### **BOOT VOLTAGE PROGRAMMING**

The NCP6151/NCP6151A has a Vboot voltage register that can be externally programmed for each output. The VBOOTA also provides a feature that allows the "+1" single phase output to be disabled and effectively removed from the SVID bus. If the single phase output is disabled it alters the SVID address setting table to allow the multi-phase rail to show up at an even or odd address. See the Boot Voltage Table below.

#### **Boot Voltage Table**

Boot Voltage (V)	Resistor Value (Ohms)
0	10k
0.9	25k
1.0	45k
1.1	70k
1.2	95k
1.35	125k
1.5	165k
Shutdown (VBOOTA only)	VBOOTA=VCC

#### ADDRESSING THE NCP6151/NCP6151A

The NCP6151/NCP6151A supports 7 possible dual SVID device addresses and 8 possible single device addresses. Pin 32 (PWM1/ADDR) is used to set the SVID address. On power up a 10uA current is sourced from this pin through a resistor connected to this pin and the resulting voltage is measured. The two tables below provide the resistor values for each corresponding SVID address. For dual addressing follow the Dual SVID Address Table. The address value is latched at startup. If VBOOTA is pulled to VCC the aux rail will be removed from the SVID bus, the address will then follow the Single Address SVID table below.

#### **Dual SVID Address Table**

Resistor	Main Rail SVID Address	Aux Rail SVID Address		
Value				
10k	0000	0001		
25k	0010	0011		
45k	0100	0101		
70k	0110	0111		
95k	1000	1001		
125k	1010	1011		
165k	1100	1101		

**Single SVID Address Table** 

Single SVID Address Table		
Resistor Value	Main Rail SVID Address (VBOOTA tied to VCC)	
10k	0000	
22k	0001	
36k	0010	
51k	0011	
68k	0100	
91k	0101	
120k	0110	
160k	0111	
220k	1000	

### **Remote Sense Amplifier**

A high performance high input impedance true differential amplifier is provided to accurately sense the output voltage of the regulator. The VSP and VSN inputs should be connected to the regulator's output voltage sense points. The remote sense amplifier takes the difference of the output voltage with the DAC voltage and adds the droop voltage to

$$V_{DIFFOUT} = (V_{VSP} - V_{VSN}) + (1.3V - V_{DAC}) + (V_{DROOP} - V_{CSREF})$$


This signal then goes through a standard error compensation network and into the inverting input of the error amplifier. The non-inverting input of the error amplifier is connected to the same 1.3 V reference used for the differential sense amplifier output bias.

#### **High Performance Voltage Error Amplifier**

A high performance error amplifier is provided for high bandwidth transient performance. A standard type 3 compensation circuit is normally used to compensate the system.

#### **Differential Current Feedback Amplifiers**


Each phase has a low offset differential amplifier to sense that phase current for current balance and per phase OCP protection during soft-start. The inputs to the CSNx and CSPx pins are high impedance inputs. It is recommended that any external filter resistor RCSN not exceed 10kOhm to avoid offset issues with leakage current. It is also recommended that the voltage sense element be no less than 0.5mOhm for accurate current balance. Fine tuning of this time constant is generally not required.

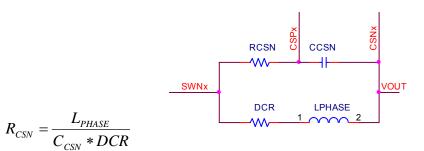

The individual phase current is summed into to the PWM comparator feedback in this way current is balanced is via a current mode control approach.

#### **Total Current Sense Amplifier**

The NCP6151/NCP6151A uses a patented approach to sum the phase currents into a single temperature compensated total current signal. This signal is then used to generate the output voltage droop, total current limit, and the output current monitoring functions. The total current signal is floating with respect to CSREF. The current signal is the difference between CSCOMP and CSREF. The Ref(n) resistors sum the signals from the output side of the inductors to create a low impedance virtual ground. The amplifier actively filters and gains up the voltage applied across the inductors to recover the voltage drop across the inductor series resistance (DCR). Rth is placed near an inductor to sense the temperature of the inductor. This allows the filter time constant and gain to be a function of the Rth NTC resistor and compensate for the change in the DCR with temperature.

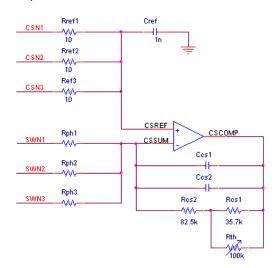

The DC gain equation for the current sensing:

$$V_{CSCOMP-CSREF} = -rac{Rcs2 + rac{Rcs1 * Rth}{Rcs1 + Rth}}{Rph} * (Iout_{Total} * DCR)$$

Set the gain by adjusting the value of the Rph resistors. The DC gain should set to the output voltage droop. If the voltage from CSCOMP to CSREF is less than 100mV at ICCMAX then it is recommend to increase the gain of the CSCOMP amp and add a resister divider to the Droop pin filter. This is required to provide a good current signal to offset voltage ratio for the ILIMIT pin. When no droop is needed, the gain of the amplifier should be set to provide ~100mV across the current limit programming resistor at full load. The values of Rcs1 and Rcs2 are set based on the 100k NTC and the temperature effect of the inductor and should not need to be changed. The NTC should be placed near the closest inductor. The output voltage droop should be set with the droop filter divider.

The pole frequency in the CSCOMP filter should be set equal to the zero from the output inductor. This allows the circuit to recover the inductor DCR voltage drop current signal. Ccs1 and Ccs2 are in parallel to allow for fine tuning of the time constant using commonly available values. It is best to fine tune this filter during transient testing.

$$F_{Z} = \frac{DCR @ 25C}{2 * PI * L_{Phase}}$$

$$F_{P} = \frac{1}{2 * PI * \left(Rcs2 + \frac{Rcs1 * Rth @ 25C}{Rcs1 + Rth @ 25C}\right) * (Ccs1 + Ccs2)}$$


# **Programming the Current Limit**

The current limit thresholds are programmed with a resistor between the ILIMIT and CSCOMP pins. The ILIMIT pin mirrors the voltage at the CSREF pin and mirrors the sink current internally to IOUT (reduced by the IOUT Current Gain) and the current limit comparators. The 100% current limit trips if the ILIMIT sink current exceeds 10uA for 50us. The 150% current limit trips with minimal delay if the ILIMIT sink current exceeds 15uA. Set the value of the current limit resistor based on the CSCOMP-CSREF voltage as shown below.

$$R_{LIMIT} = \frac{\frac{Rcs2 + \frac{Rcs1 * Rth}{Rcs1 + Rth}}{Rph} * (Iout_{LIMIT} * DCR)}{10u} \text{ or } R_{LIMIT} = \frac{V_{CSCOMP-CSREF @ ILIMIT}}{10u}$$


#### **Programming DROOP and DAC Feed-Forward Filter**

The signals DROOP and CSREF are differentially summed with the output voltage feedback to add precision voltage droop to the output voltage. The total current feedback should be filtered before it is applied to the DROOP pin. This filter impedance provides DAC feed-forward during dynamic VID changes. Programming this filter can be made simpler if CSCOMP-CSREF is equal to the droop voltage. Rdroop sets the gain of the DAC feed-forward and Cdroop provides the time constant to cancel the time constant of the system per the following equations. Cout is the total output capacitance and Rout is the output impedance of the system.

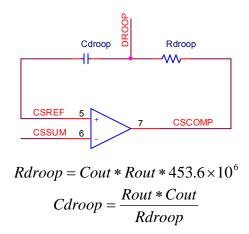

If the Droop at maximum load is less than 100mV at ICCMAX we recommend altering this filter into a voltage divider such that a larger signal can be provided to the ILIMIT resistor by increasing the CSCOMP amp gain for better current monitor accuracy. The DROOP pin divider gain should be set to provide a voltage from DROOP to

CSREF equal to the amount of voltage droop desired in the output. A current is applied to the DROOP pin during dynamic VID. In this case Rdroop1 in parallel with Rdroop2 should be equal to Rdroop

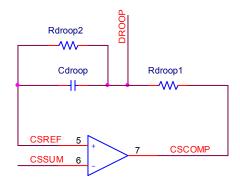

# **Programming IOUT**

The IOUT pin sources a current equal to the ILIMIT sink current. The voltage on the IOUT pin is monitored by the internal A/D converter and should be scaled with an external resistor to ground such that a load equal to ICCMAX generates a 2V signal on IOUT. A pull-up resistor from 5V VCC can be used to offset the IOUT signal positive if needed.

$$R_{IOUT} = \frac{2.0V * R_{LIMIT}}{10 * \frac{Rcs2 + \frac{Rcs1 * Rth}{Rcs1 + Rth}}{Rph} * (Iout_{ICC\_MAX} * DCR)}$$


# Programming ICC\_MAX and ICC\_MAXA

The SVID interface provides the platform ICC\_MAX value at register 21h for both the multiphase and the single phase rail. A resistor to ground on the IMAX and IMAXA pins program these registers at the time the part in enabled. 10uA is sourced from these pins to generate a voltage on the program resistor. The value of the register is 1A per LSB and is set by the equation below. The resistor value should be no less than 10k.

$$ICC\_MAX_{21h} = \frac{R*10uA*256A}{2V}$$

### **Programming TSENSE and TSENSEA**

Two temperature sense inputs are provided. A precision current is sourced out the output of the TSENSE and TSENSEA pins to generate a voltage on the temperature sense network. The voltages on the temperature sense inputs are sampled by the internal A/D converter. A 100k NTC similar to the VISHAY ERT-J1VS104JA should be used. Rcomp1 is mainly used for noise. See the specification table for the thermal sensing voltage thresholds and source current.

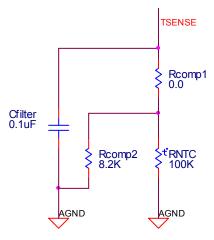

#### **Precision Oscillator**

A programmable precision oscillator is provided. The clock oscillator serves as the master clock to the ramp generator circuit. This oscillator is programmed by a resistor to ground on the ROSC pin. The oscillator frequency range is between 200KHz/phase to 1MHz/phase. The ROSC pin provides approximately 2V out and the source current is mirrored into the internal ramp oscillator. The oscillator frequency is approximately proportional to the current flowing in the ROSC resistor.

$$\frac{6.98kOhm \times 350kHz}{Fs} = Rosc$$


The oscillator generates triangle ramps that are 0.5~2.5 V in amplitude depending on the VRMP pin voltage to provide input voltage feed forward compensation. The ramps are equally spaced out of phase with respect to each other and the signal phase rail is set half way between phases 1 and 2 of the multi phase rail for minimum input ripple current.

### **Programming the Ramp Feed-Forward Circuit**

The ramp generator circuit provides the ramp used by the PWM comparators. The ramp generator provides voltage feed-forward control by varying the ramp magnitude with respect to the VRMP pin voltage. The VRMP pin also has a 4V UVLO function. The VRMP UVLO is only active after the controller is enabled. The VRMP pin is high impedance input when the controller is disabled.


The PWM ramp time is changed according to the following,

$$V_{RAMPpk=pk_{PP}} = 0.1 * V_{VRMP}$$

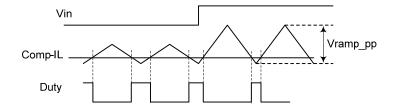

### **Programming TRBST**

The TRBST pin provides a signal to offset the output after load release overshoot. This network should be fine tuned during the board tuning process and is only necessary in systems with significant load release overshoot. The TRBST network allows maximum boost for low frequency load release events to minimize load release undershoot. The network time constants are set up to provide a TRBST roll of at higher frequencies where it is not needed. Cboost1\*Rbst1 controls the time constant of the load release boost. This should be set to counter the under shoot after load release. Rbst1+ Rbst2 controls the maximum amount of boost during rapid step loading. Rbst2 is generally much larger then Rbst1. The Cboost2\*Rbst2 time constant controls the roll off frequency of the TRBST function.

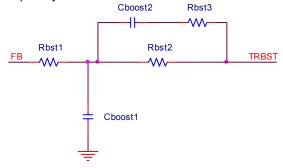

#### **PWM Comparators**

During steady state operation, the duty cycle is centered on the valley of the triangle ramp waveform and both edges of the PWM signal are modulated. During a transient event the duty will increase rapidly and proportionally turning on all phases as the error amp signal increases with respect to the ramps to provide a highly linear and proportional response to the step load.

#### PHASE DETECTION SEQUENCE

During start-up, the number of operational phases and their phase relationship is determined by the internal circuitry monitoring the PWM outputs. Normally, NCP6151/NCP6151A operates as a 4-phase VCORE+1-phase VAUX PWM controller. For NCP6151, Connecting PWM4 pin to VCC programs 3-phase operation.

Prior to soft start, while ENABLE is high, NCP6151 PWM4 pin sinks approximately 100  $\mu$ A. An internal comparator checks the voltage of PWM4 pin and compares it to a threshold of hold of 2.5V. If the pin is tied to VCC, its voltage is above the threshold and the controller is configured to three phase operation otherwise the part operates in four phase mode.

The Aux rail can be disabled by pulling the VBOOTA signal to VCC. This changes the SVID address scheme to allow the multiphase to be programmed to any SVID Address odd or even. See the register resistor programming table.

# **Phase Count Table**

Number of phases	Resistor Programming	
4+1(NCP6151/NCP6151A)	PWM4 connected, VbootA programmed	
3+1(NCP6151)	PWM4 tied to VCC, VbootA programmed	
4+0(NCP6151/NCP6151A)	PWM4 connected, VbootA tied to VCC	
3+0(NCP6151)	PWM4 tied to VCC, VbootA tied to VCC	

# **3+1 Unused Pin Connection Table**

Unused Pin	Connect to	Unused Pin	Connect to
PWM4	VCC		
CSN4	GND or VCC	CSN4	VCC
CSP4	Same as CSN4	CSP4	VCC(optional)

# 4+0 Unused Pin Connection Table

1 0 0114664	• •	
Unused	Connect	
Pin	to	
VBOOTA	VCC	
VSPA	GND	
VSNA	GND	
DIFFOUTA	float	
FBA	COMPA	
COMPA	FBA	
TRBSTA	float	
CSPA	GND	
CSNA	GND	
CSCOMPA	CSSUMA	
CSSUMA	CSCOMPA	
DROOPA	GND or	
	CSCOMPA	
ILIMA	float	
IMONA	GND	
TSENSEA	GND	
PWMA	float	

# 3+0 Unused Pin Connection Table

Unused	Connect	
Pin	to	
PWM4	VCC	
CSN4	GND or	
	VCC	


Same as	
CSN4	
VCC	
GND	
GND	
float	
COMPA	
FBA	
float	
GND	
GND	
CSSUMA	
CSCOMPA	
GND or	
CSCOMPA	
float	
GND	
GND	
float	

### **Protection Features**

# **Input Under Voltage Protection**

NCP6151/NCP6151A monitors the 5V VCC supply and the VRMP pin for under voltage protection. The gate driver monitors both the gate driver VCC and the BST voltage (12V drivers only). When the voltage on the gate driver is insufficient it will pull DRVON low and notify the controller the power is not ready. The gate driver will hold DRVON low for a minimum period of time to allow the controller to restart its startup sequence. In this case the PWM is set back to the MID state and soft start would begin again. See the figure below.


## **Gate Driver UVLO Restart**

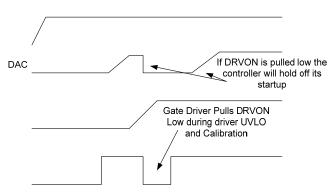

#### **Soft Start**

Soft start is implemented internally. A digital counter steps the DAC up from zero to the target voltage based on the predetermined slew rate in the spec table. The PWM signals will start out open with a test current to collect data on phase count and for setting internal registers. After the configuration data is collected the controller

enables and sets the PWM signal to the 2.0V MID state to indicate that the drivers should be in diode mode. DRVON will then be asserted and the COMP pin released to begin soft-start. The DAC will ramp from Zero to the target DAC codes and the PWM outputs will begin to fire. Each phase will move out of the MID state when the first PWM pulse is produced preventing the discharge of a pre-charged output.

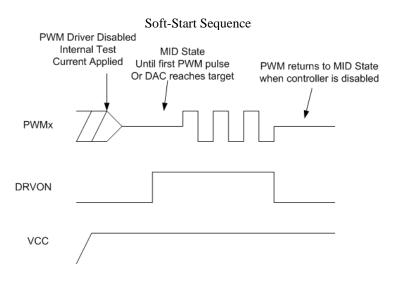

#### **Over Current Latch- Off Protection**

The NCP6151/NCP6151A provides two different types of current limit protection. During normal operation a programmable total current limit is provided that scales with the phase count during power saving operation. This limit is proprammed with a resistor between the CSCOMP and ILIM pins. A second fixed per-phase current limit is provided for safe-start up monitoring during soft-start. The level of total current limit is set with the resistor from the ILIM pin to CSCOMP. The current through the external resistor connected between ILIM and CSCOMP is then compared to the internal current of 10uA and 15uA. If the current into the ILIM pin exceeds the 10A level an internal latch-off counter starts. The controller shuts down if the fault is not removed after 50us. If the current into the pin exceeds 15uA the controller will shut down immediately. To recover from an OCP fault the EN pin must be cycled low.

The over-current limit is programmed by a resistor on the ILIM pin. The resistor value can be calculated by the following equation:

$$R_{ILIM} = \frac{V_{CSCOMP} - V_{CSREF}}{10uA}$$


# **Under Voltage Monitor**

The output voltage is monitored at the output of the differential amplifier for UVLO. If the output falls more than 300mV below the DAC-DROOP voltage the UVLO comparator will trip sending the VR\_RDY signal low.

#### **Over Voltage Protection**


During normal operation the output voltage is monitored at the differential inputs VSP and VSN. If the output voltage exceeds the DAC voltage by approximately 175 mV, PWMs will be forced low until the voltage drops below the OVP threshold after the first OVP trip the DAC will ramp down to zero to avoid a negative output voltage spike during shutdown. When the DAC gets to zero the PWMs will be forced low and the DRVON will remain high. To reset the part the Enable pin must be cycled low. During soft-start, the OVP threshold is set to

2.0V. This allows the controller to start up without false triggering the OVP. Prior to soft-start the gate drivers will provide OVP protection directly at the switching nodes.

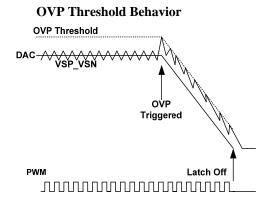


#### **Layout Notes**

The NCP6151/NCP6151A has differential voltage and current monitoring. This improves signal integrity and reduces noise issues related to layout for easy design use. To insure proper function there are some general rules to follow. Always place the inductor current sense RC filters as close to the CSN and CSP pins on the controller as possible. Place the VCC decoupling caps as close as possible to the controller VCC pin. The high frequency filter cap on CSREF and the 10 ohm CSREF resistors should be placed close to the controller. The small high feed back cap from COMP to FB should be as close to the controller as possible. Please minimize the capacitance to ground of the FB traces by keeping them short. The filter cap from CSCOMP to CSREF should also be close to the controller.

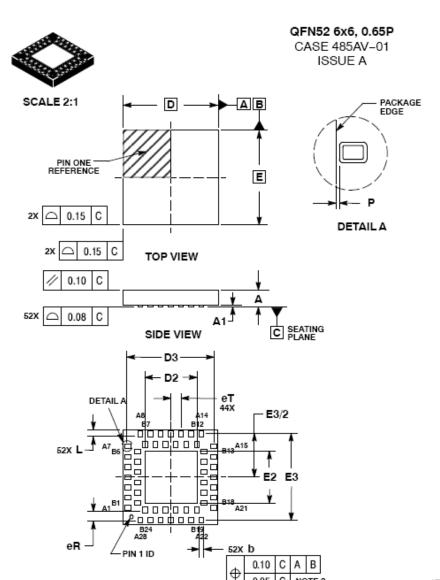

#### SOLDERING FOOTPRINT

**BOTTOM VIEW** 

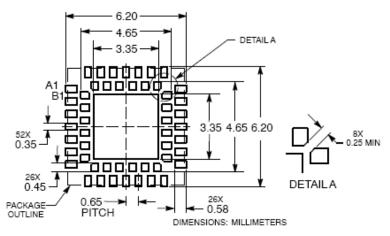


C NOTE 3

0.05

- NOTES:
  1. DIMENSIONING AND TOLERANCING PER ASME Y14.5M, 1994.
  2. CONTROLLING DIMENSIONS: MILLIMETERS.
  3. DIMENSION & APPLIES TO PLATED TERMINAL AND IS MEASURED BETWEEN 0.25 AND 0.30mm FROM TERMINAL 4. COPLANARITY APPLIES TO THE EXPOSED
- PAD AS WELL AS THE TERMINALS.

	MILLIMETERS			
DIM	MIN	NOM	MAX	
Α	0.80	0.90	1.00	
A1	0.00	0.05	0.10	
b	0.25	0.30	0.35	
D		6.00 BSC		
D2	3.20	3.30	3.40	
D3		5.50 BSC		
E		6.00 BSC		
E2	3.20	3.30	3.40	
E3	5.50 BSC			
eT	0.65 BSC			
eR	0.65 BSC			
L	0.35	0.40	0.45	
P		0.05 REF		

#### GENERIC MARKING DIAGRAM\*

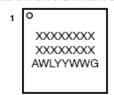

XXXXX = Specific Device Code

= Assembly Location Α

WL = Wafer Lot YΥ = Year ww = Work Week = Pb-Free Package G

<sup>\*</sup>This information is generic. Please refer to device data sheet for actual part marking. Pb-Free indicator, "G" or microdot " •", may or may not be present.